



**“Summer Cooling” Function in:
AXCO Heru Heat Recovery Ventilation Systems**



With everyone enjoying the warm weather and the start of summertime, don't forget to take advantage of the 'Summer Cooling' function available on all **BEAM Axco Heru MVHR systems**.

This unique feature to the BEAM Heru range of ventilation allows the homeowner to cool down the inside air slightly via the function within the remote control creating 'Summer Cooling'.

The units fan speed is boosted when the ratio between the outside temperature and extract air temperature is within the programmed criteria.

Please note - this will not make the system act as an air conditioning system but will give some small cooling comfort in warm summer evenings, which is welcomed, especially when you may find opening doors and windows is not creating enough cool air movement during a 'heat wave'.

This feature again sets apart our Heru Ventilation range from the rest of the market and the benefits are being felt by staff & customers alike in our own office since we activated the Summer Cooling function in recent days, with the change to the warmer weather outdoors.

More information is available within the Heru Handbook/Directions for use, but for a quick, easy reference guide for your knowledge and use with existing customers with Heru units, please see below on how to activate the 'Summer Cooling' function.

To Activate the Summer Cooling for the 62 T & 75 S Units

1. Set temperature to 21° C On the Main Menu OR In the 7 Day Timer If Activated

2. Go to Service Menu
-Enter **1199** code
3. Go to Summer Cooling

Set » Outdoor To: 12° C
 » Exhaust Hi: 24° C
 » Exhaust Lo: 18° C
4. Set Summer Cooling **ON**
5. Set Fan speed to Medium if not on Weekly Timer
6. **Load & Save Settings**
7. A "Snow Flake symbol" may be visible on the handset depending on the version of your unit.

To Activate Summer Cooling on all other units (EC)
Heru 90S 100S 130S 180S 250S 100T 130T 160T

1. Set Temperature to 21° C On the Main Menu OR In the 7 Day Timer If Activated
2. Go to Service Menu

 »Enter **1199** code
3. Go to Summer Cooling

Set in / out DIFF : 3° C
Exhaust Hi: : 24° C
Exhaust Lo : 18 ° C
4. Set Summer Cooling **ON**
5. Set Fan speed to Medium if not on Weekly Timer
8. **Load & Save Settings**

NOTE: Please note - Summer Cooling should be de-activated on hand-set when no longer required

Should problems persist with your inlet, please do not hesitate to contact us by calling
+353 (0)90 666 0198 or email info@seangavinbeam.com
Seán Gavin Vacuum, Ventilation, Electrical - Newbridge, Co. Galway H53 FE81
www.seangavinbeam.com