

“Night Cooling” Function in: Next Generation HERU Heat Recovery Ventilation Systems



To Activate Night Cooling

Night cooling is a temperature regulated boost without heat recovery, where the unit is cooled with cold outdoor air as needed.

Night cooling is activated when the exhaust air temperature is higher than **Exhaust Air High** and outdoor temperature is colder than **IN/OUT Difference**.

Night Cooling is deactivated when the exhaust air temperature is lower than **Exhaust Air Low** or the outdoor temperature is warmer than the **IN/OUT Difference**.

Temperature Evaluation Rest Mode must be activated if the unit is in standby mode or night cooling is requested.

Temperature Evaluation Rest Mode checks whether the criteria for activating night cooling has been fulfilled within the set time intervals.

No preparations are required.

1. Open the main menu and select **Service**
2. Log in and enter code **1199**
3. Press **Ok**
4. Select **Setup**
5. Scroll down to **Night Cooling** and press the **Activate** Icon
6. Enter the selected value
7. If the unit is in standby and night cooling has been requested, activate **Temperature Evaluation Rest Mode**
8. Enter the selected value
9. Return to the main menu by pressing the **main menu** button in the upper left corner
10. Return to the home screen by pressing the **X** button in the upper left corner

Get in Touch

+353 (0)90 666 0198 or email info@seangavinbeam.com

Seán Gavin Vacuum, Ventilation, Electrical - Newbridge, Co. Galway H53 FE81

www.seangavinbeam.com